


Prefab Assemblies



Let SP be Your Prefab Shop with **NO INVESTMENT**
on Every Day Jobs Throughout the Year

**PLUS...Compete Aggressively and
Win Larger Jobs with More Profit**

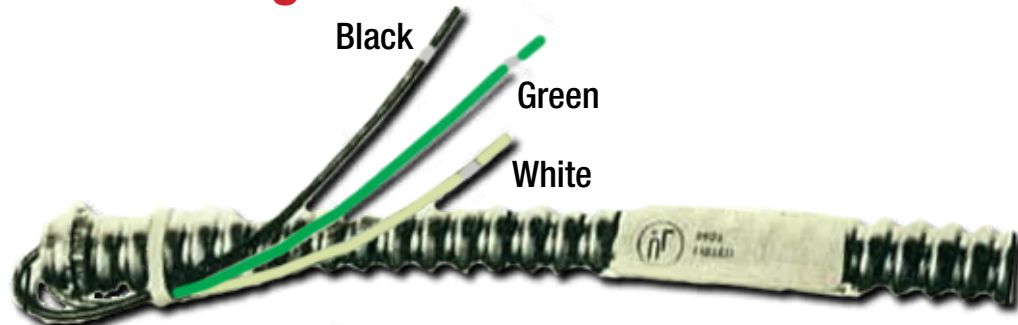

For Either Flex & MC Cable...

Later during the job when correct whip lengths are known, connect whip leads to device leads extending out of box with Wago type push-on or live spring wire nuts and feed all wires through open KO back into box until whip is attached to box with a snap on connector attached on its end.

20 Amp - CRB5362
Cat# MC PF
1-R

Protective Covers
Available Separately
1 GANG = SOC-1G
2 GANG = SOC-2G
(see pg TE-1)

...OR EMT Conduit

1. Run conduit to correct KO location in box.
2. Drop mud ring with device that is firmly attached to green ground screw in box.
3. Feed wires through conduit and connect them to device leads with Wago type push-on or live spring wire nuts.
4. Install mud ring with device back onto box.

Above assembly includes the following components

- 1- 4 square 1/2" - 3/4" KO x 2 1/8 deep box
- 1- 1 gang x 5/8" raised mud ring
- 1- 20 A specification grade CRB5362 back & side wired device tucked in or attached to mud ring
- 1- Single box support 16 gauge BSB1-FTD (IP28)

- 1- #12 stranded 8 inch pigtail grounded to box
- 3- #12 THNN stranded 8" long any color wire leads each with Wago push on quick connector or live spring wire nuts attached.
- 1- One or two gang protective cover (shown above) attached to mud ring.

Also Available without wiring devices and with any Type, Combination and Manufacturers Brand Components. If not Specified SP will Supply Equals.

Labor only orders also negotiated

Customer must satisfy all codes and owners' specifications.



PATENT PENDING
PATENTED



LABELS APPLY TO PRODUCTS ONLY WHERE SHOWN ABOVE

730 Pratt Boulevard • Elk Grove Village, IL 60007
P: (847) 593-8595 • F: (847) 593-8629 • Toll-free (800) 233-8595
E: info@spproducts.com • www.spproducts.com

PFA3