


# Poly Foam Box Insert

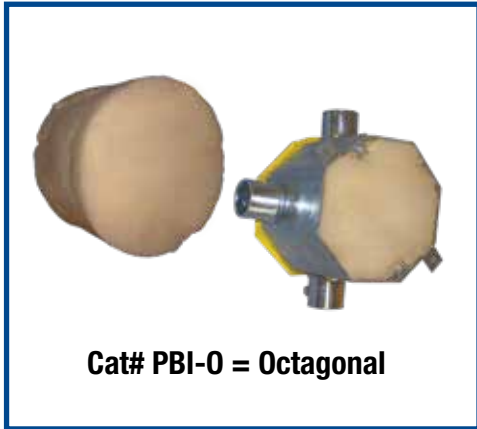

Cat# PBI-0 = Octagonal



Cat# PBI-4/S-1G = 1 Gang (4")  
Cat# PBI-5/S-1G = 1 Gang (4<sup>11/16</sup>" )



Cat# PBI-4/S-2XR = 4<sup>1/4</sup>"  
2-Extension Ring



Cat# PBI-4/S-1XR = 3<sup>3/4</sup>"  
1-Extension Ring



Cat# PBI-4/S-2G = 2 Gang (4")  
Cat# PBI-5/S-2G = 2 Gang (4<sup>11/16</sup>" )



Cat# PBI-4/S-3XR = 7"  
3-Extension Rings

- Prevents Concrete from Entering Boxes
- Fast and Easy to Install
- Reusable for 8 or more applications



PATENTED

- Saves Over 5 Minutes, Plus Cost of Tape
- For All Types of Boxes on Poured in Place Concrete Jobs

Traditional Method of Taping Box to Keep Out Concrete During Pour

**Available in a Wide Variety of Other Configurations  
Consult Factory for more Information**

Customer must satisfy all codes and owners' specifications.



PATENT PENDING  
PATENTED



LABELS APPLY TO PRODUCTS ONLY WHERE SHOWN ABOVE

730 Pratt Boulevard • Elk Grove Village, IL 60007  
P: (847) 593-8595 • F: (847) 593-8629 • Toll-free (800) 233-8595  
E: info@spproducts.com • www.spproducts.com

**TE4**