

# Transition Couplings



## PVC Schedule 40 & 80 Slip to EMT

Save at Least  
**1 Hour** per  
Installation.



PATENTED



**Transitions in One Minute**

**Save Cost on the Rigid Nipple, Tape & Labor**

**Use for Entire Job - Not Just for Repair**



**Reamer NOT Required to Transition  
from PVC to EMT Conduit**

**Apply PVC Cement  
to Secure & Complete**



**1/2" thru 4"**

**Step 1**  
Install PVC Coupling  
on Conduit Flush  
or Just Below Grade  
and Cap with  
(Conduit Plug IP27c) or  
Tape Prior to Pour

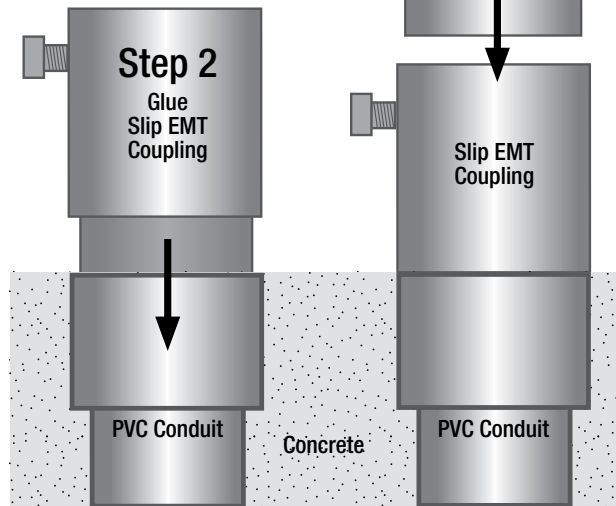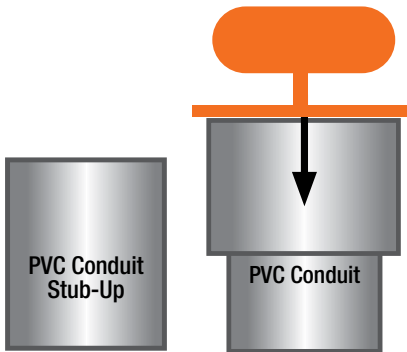

Transition Couplings	
Size	Catalog #
1/2"	50 SLIP/EMT
3/4"	75 SLIP/EMT
1"	100 SLIP/EMT
1-1/4"	125 SLIP/EMT
1-1/2"	150 SLIP/EMT
2"	200 SLIP/EMT
2-1/2"	250 SLIP/EMT
3"	300 SLIP/EMT
3-1/2"	350 SLIP/EMT
4"	400 SLIP/EMT

All SP Products Inc. Transition Fittings are manufactured for installation to either meet or exceed in accordance with NEMA TC2, TC3 or UL 651 specifications

**Customer must satisfy all codes and owners' specifications.**



PATENT PENDING  
PATENTED



LABELS APPLY TO PRODUCTS ONLY WHERE SHOWN ABOVE

730 Pratt Boulevard • Elk Grove Village, IL 60007  
P: (847) 593-8595 • F: (847) 593-8629 • Toll-free (800) 233-8595  
E: info@spproducts.com • www.spproducts.com

**IP12e**