

# Transition Couplings



## PVC Schedule 40 & 80 Slip to Smooth Bushing

Save at Least  
**1 Hour** per  
Installation.

  
PATENTED

**Transitions in One Minute**

**Save Cost on the Rigid Nipple, Tape & Labor**

**Use for Entire Job - Not Just for Repair**

**Reamer NOT Required to Transition from PVC to Smooth Bushing (SB)**

**Apply PVC Cement to Secure & Complete**




**1/2" thru 4"**

Transition Couplings	
Size	Catalog #
1/2"	50 SLIP/SB
3/4"	75 SLIP/SB
1"	100 SLIP/SB
1-1/4"	125 SLIP/SB
1-1/2"	150 SLIP/SB
2"	200 SLIP/SB
2-1/2"	250 SLIP/SB
3"	300 SLIP/SB
3-1/2"	350 SLIP/SB
4"	400 SLIP/SB

**Step 1**  
Install PVC Coupling on Conduit Flush or Just Below Grade and Cap with (Conduit Plug IP27c) or Tape Prior to Pour

**Step 2**  
Glue Slip SB Coupling

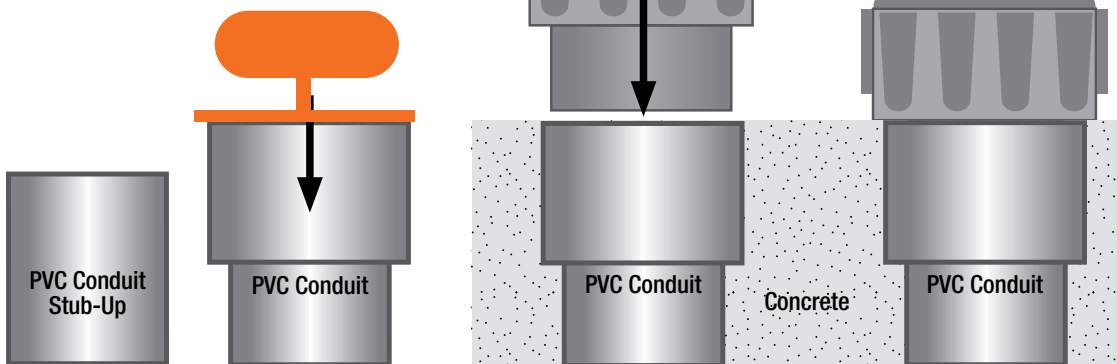

All SP Products Inc. Transition Fittings are manufactured for installation to either meet or exceed in accordance with NEMA TC2, TC3 or UL 651 specifications

**Customer must satisfy all codes and owners' specifications.**

**SP PRODUCTS, INC**  
Productivity and value thru ideas



PATENT PENDING  
PATENTED



LABELS APPLY TO PRODUCTS ONLY WHERE SHOWN ABOVE

730 Pratt Boulevard • Elk Grove Village, IL 60007  
P: (847) 593-8595 • F: (847) 593-8629 • Toll-free (800) 233-8595  
E: info@spproducts.com • www.spproducts.com

**IP12h**